9. Select the share settings you'd like to use:

- Enable Access-Based Enumeration: Hides files that the user does not have permission to access
- Allow Caching of Share: Makes the files available to offline users
- Encrypt Data Access: Encrypts files accessed via the share

10. Click Next.

The wizard displays the default permissions that will be used for the new share, as shown in Figure 13-6.

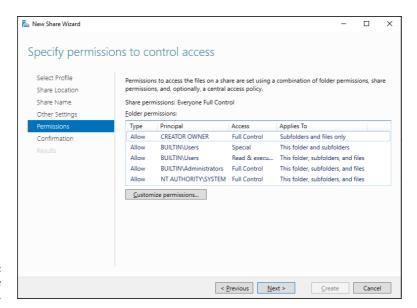


FIGURE 13-6: Setting the share permissions.

11. (Optional) If you want to customize the permissions, click the Customize Permissions button.

Clicking this button summons the Advanced Security Settings for Data dialog box, where you can customize both the NTFS and the share permissions.

12. Click Next.

The confirmation page appears, as shown in Figure 13-7.

13. Verify that all the settings are correct and then click the Create button.

The share is created, and a results dialog box is displayed, as shown in Figure 13-8.